


Optical Connector Cleaner

Manual



Structure

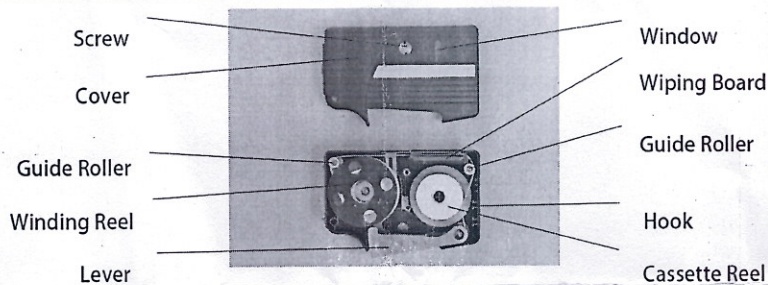


How to use



①

Open the shutter by gripping lever. New cleaning tape will appear.

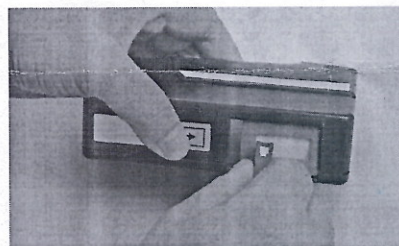

②


Push and slide a ferrule end face while gripping the lever.

③

Close the shutter by releasing the grip.




How to replace the Cassette Reel.

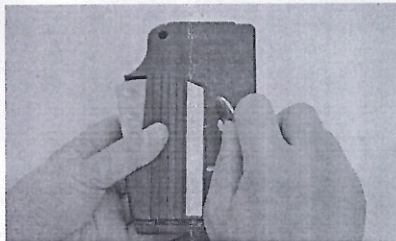


①

Turn the screw with a coin ,Open the cover. Take out the cassette reel and the winding reel.

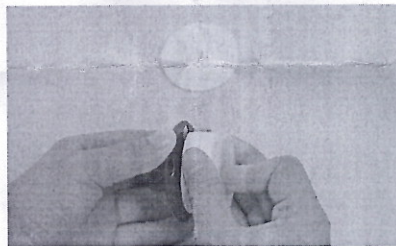


②

Pull out the tape from the winding reel.

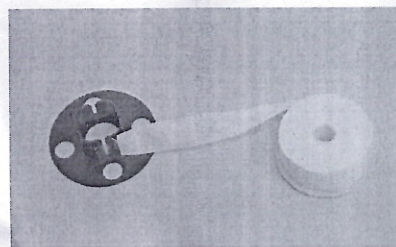


③

Load the new tape on the winding reel with a bonding tape.

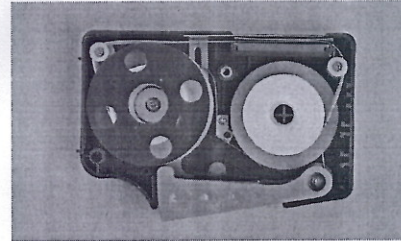

④

Set up the winding reel and the cassette reel in the body.

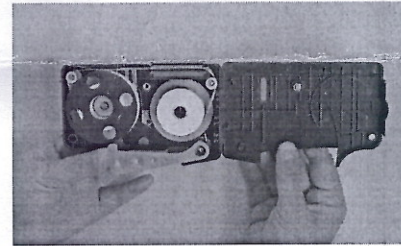

⑤

Hook the cover on the body.



⑥

Grip the lever 2 or 3 times and to check the tape is moving smoothly.

Caution

When the lever becomes difficult to depress, it indicates a new refill is needed. Repeated forceful depression of lever can cause damage to cleaner mechanism. Be Careful not to place this product at more than 60°C for long times and it may lose its functionality. Replace the new reel in the manual way. If you do not, a damage may result. KomShine strongly suggests for Optipop users to use replacement reel manufactured by KomShine in order to optimize the cleaning performance. Optipop can not be warranted when improper replacement is installed.